


The 0 ohm resistors in the clock lines can be removed when the test connector is not used. This avoids long stubs on the clock lines. Note that the resistors should be placed near the clock source!

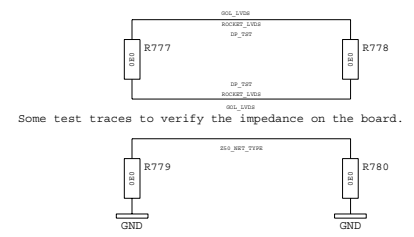

MROD-Out		Rev	V2	4
		Date	7 Feb 2006	
Test connectors		Time	1:36:13 pm	
Proj: MROD-X	Proj.No: 38405	Name	tonvr	
Peter Jansweijer	peterj@nikhef.nl	Size	A3	4 1 4 A
NIKHEF © ET-Nikhef Amsterdam	NATIONAAL INSTITUUT VOOR KERN-FYSICA EN HOGE ENERGIE-FYSICA KRUISLAAN 409, 020-592 2000 1098 SJ AMSTERDAM NEDERLAND	Dim	420 x 297 mm	
		Page	19 of 19	